

INSTRUCTIONS FOR USE STICK VACUUM CLEANER REF BB134-1 / BB134-2 model TPSK-01

SAFETY INSTRUCTIONS

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE AND SAVE THEM FOR FUTURE REFERENCE.

This appliance is intended for household use only. Use the appliance only as instructed in this manual.

Do not use the appliance outdoors or on a wet surface. This appliance should not be exposed to rain or moisture. Be careful not to expose the appliance to spray water. Do not use or recharge the appliance near a shower, bath, swimming pool, etc.

Never use the vacuum cleaner on a person or animal.

Check that the power supply voltage indicated on the rating plate of the battery charger corresponds to that of your electrical installation.

Use only the accessories supplied with the appliance. Failure to follow this instruction may be dangerous to the user and may damage the appliance.

Use only the battery charger supplied with this appliance to recharge the battery. The supplied battery charger should only be used with this vacuum cleaner.

This appliance is not intended for use by people (including children under the age of 8) with reduced physical, sensory or mental capabilities, or by people with a lack of experience and knowledge, unless they are being supervised or have received prior instructions on how to use the appliance by a person responsible for their safety.

Children should be supervised to make sure that they do not play with the appliance.

Do not use the appliance:

- in the event of a malfunction,
- if the appliance has been damaged in any way,
- if the appliance has been dropped in water.

Users should not attempt to repair the appliance themselves.

In the event of damage to the product, contact a qualified person to avoid any danger.

Never submerge the appliance, power cord or mains charger plug in water or any other liquid.

Do not expose this appliance to any heat source, such as a radiator, hot air inlet, oven or any other device that produces heat.

Do not insert any object into the ventilation openings of the appliance.

Never use the vacuum cleaner without the dust container or filter. Do not use the vacuum cleaner if the filter is damaged.

The power cable must be disconnected from the appliance before cleaning or maintenance.

The appliance must be disconnected from the power supply before the battery is removed.

Never vacuum up wet substances and liquids, or toxic, flammable or combustible substances, such as petrol. Likewise, do not use the vacuum cleaner near explosives or flammable fumes.

Never vacuum up sharp or spiky objects, nor any burning or incandescent objects, such as cigarettes, matches or hot ash.

Do not vacuum up very fine dust particles, such as from plaster, concrete or flour, for example.

Do not leave the appliance unattended while it is charging, even if it is switched off.

Failure to comply with the above instructions may cause serious damage to the motor.

TECHNICAL SPECIFICATIONS

Power supply: 7.2 V 2000 mAh lithium rechargeable battery

Input: 230 - 240 V ~ 50 Hz


Vacuum cleaner power: 55 W

Recommended charging time: 4 hours

Battery life: approximately 15 to 20 minutes

Dust container capacity: 0.5 L

1. 2. Handle
3. Wand
4. Handheld vacuum cleaner
5. Handheld vacuum cleaner release button
6. On/off button
7. Indicator light
8. Air outlet
9. Dust container release button
10. Suction nozzle
11. Crevice tool
12. Connector to attach the handheld vacuum
13. Rear wheels
14. Brush
15. Front wheels

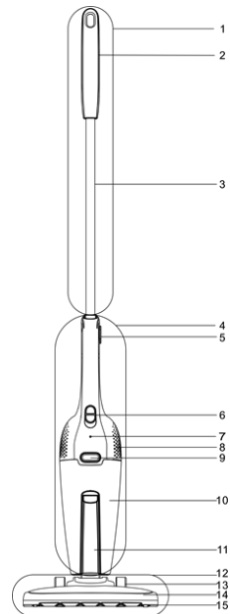


Detachable handheld vacuum cleaner: converts to a handheld vacuum cleaner for use on furniture or in the car.


VACUUM CLEANER ASSEMBLY

Always turn off the vacuum cleaner before assembly

- How to assemble the vacuum cleaner: insert the wand (1) into the slot (2) until it clicks.

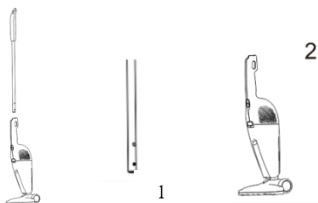


- To remove the wand, press the button (3).

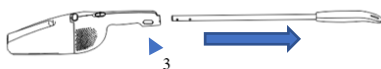

- How to attach the brush to the appliance




- How to use the crevice tool: this nozzle is attached to the dust container of the handheld vacuum cleaner

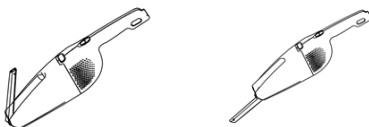

CHARGING THE BATTERY

Always turn off the vacuum cleaner before charging it.

The indicator light will flash when charging is required.
Connect the plug and plug the charger into a socket.

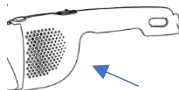

While the battery is charging, the indicator light will remain red.
When the battery is fully recharged, the indicator light will go off.

In general, it should not take any longer than 4 hours for the battery to be recharged fully, depending on prior usage time.

Unplug the power cord from the electrical outlet when you are not using the charger.

USING THE STICK/HANDHELD VACUUM CLEANER

Disconnect the charging cable if necessary.
Turn on the vacuum cleaner by sliding the on/off button.
After use, slide the on/off button again to turn off the appliance.

This appliance can be converted into a handheld vacuum cleaner.
Remove the handheld vacuum cleaner from the body of the appliance by pressing the release button.
Turn on the handheld vacuum cleaner by sliding the on/off button.
After use, slide the on/off button to turn off the appliance.


CLEANING AND MAINTENANCE:

Always turn off the vacuum cleaner before cleaning or maintenance. Do not submerge the appliance in water.

Remove the handheld vacuum cleaner from the body of the appliance by pressing the release button.

For greater efficiency, empty the dust container after every use.

Empty the dirt from the dust container and then clean the filters with soapy water.

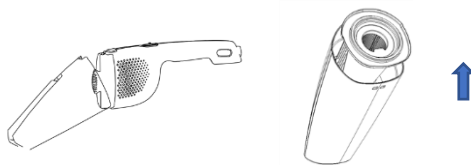

Rinse them with clean water and then leave them to air-dry before re-attaching them to the appliance. Re-attach the handheld vacuum cleaner to the body of the appliance.

Do not use the vacuum cleaner if the pre-filter or fabric filter is damaged.

The vacuum cleaner can be cleaned with a slightly damp soft cloth.

Never submerge the appliance in water or any other liquid.
Do not use solvents or abrasive detergents to clean the appliance.

ENVIRONMENT

BATTERY DISPOSAL AND RECYCLING

The built-in battery contains substances that may be harmful to the environment.



Do not dispose of the battery with household waste. In order to protect the environment, dispose of batteries in accordance with current regulations.

Dispose of batteries in the collection bins provided for this purpose.

Never dismantle, crush or pierce the battery.

Do not throw the battery into a fire.

Do not expose the battery to high temperatures or direct sunlight.

Do not incinerate the battery.

VACUUM CLEANER DISPOSAL AND RECYCLING

This symbol, affixed to the product or its packaging, indicates that this product should not be treated as household waste. It should be taken to a suitable collection site for the recycling of electrical and electronic equipment. Dispose of this product at a collection site or recycling centre.

Manufactured in PRC.

Imported by BARBACADO SAS – 82 rue de Normandie – 94700 Maisons
Alfort - France

